

## **uSDX Digital connections - settings for FT8 /JS8Call :**

### **What you need:**

2 x normal stereo 3.5 mm cables  
USB Sound card (Sabrent or other)  
PC or Mac Software FS8Call or WSJT-X  
(Watt Meter for output control)  
(Dummy Load)

### **Settings on Mac/PC:**

Computer sound level 50%  
Don't use FLRig  
On Radio tabpage JS8Call or WSJT-X : use "none" for Radio and set VOX on.  
On Audio tabpage select your USB sound card

### **Settings on uSDX:**

Manually set frequency on 7078 Khz USB for JS8 on 40 Meter Band or other -  
(search internet for correct frequency) (CAT is NOT necessary in this case -  
otherwise you have to wire a cable yourself)  
Connect Mic on sound card to Speaker on uSDX  
Connect Ear on sound card to Mik/Key on uSDX  
Adapt sound volume on uSDX to green setting in JS8Call on left hand in the  
software. (Menu item 1.1 on uSDX)  
Adapt slider on the right hand in the software to correct volume to trigger VOX on  
uSDX while Tuning in software. (mine is about 50%)  
You can control the output of the uDX transceiver with the Watt Meter.

All done.

73's de ON7XX

